

# CLINCHER® IV AND V

PHOTO BAND

## CLINCHER IV



## CLINCHER V




## INSTRUCTION SHEET


1. Turn laminator heat on and allow unit to heat up.  
Prepare the image label.




Note: Temperature gauge must be between 350 and 400 degrees or wristband will not laminate properly

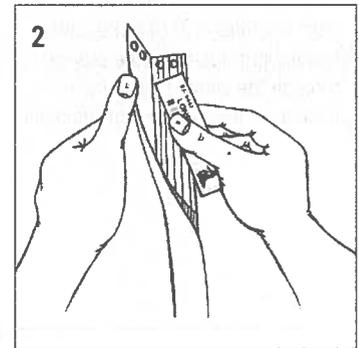


Place label inside the wristband.

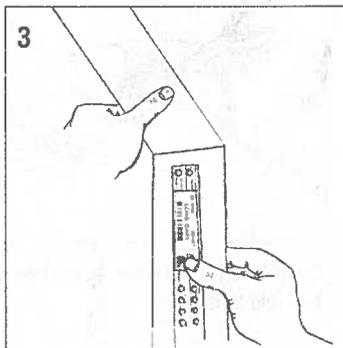

Place the wristband inside the lamination carrier sleeve. Turn on the laminator motor. Make sure wristband is in the middle of carrier sleeve to prevent wristband from slipping out.

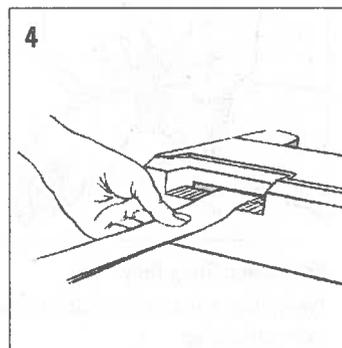

Send the carrier sleeve through the laminator. Be sure to grasp the carrier sleeve and wristband 1/4 of the way down until the laminator rollers have a hold of both. Otherwise, the wristband will slide out of the bottom of the carrier sleeve and jam the laminator.

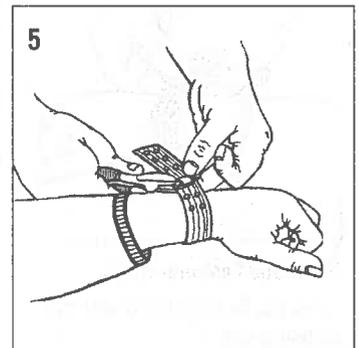

Remove the wristband from carrier sleeve and secure to recipient's wrist with enclosed fasteners.

See backside of this sheet for "How to Apply."